

型號 DHP459 充電無刷起子震動電鑽18V

分解圖號	零件編號	品名	交換	數量	N/O	選擇1	選擇2	註記
001C	187454-9	外殼組		1	*			
C10	263005-3	橡皮銷 6		2	*			
D10		INC. 21			*			
001D	187454-9	外殼組		1	*			
C10	263005-3	橡皮銷 6		2	*			
D10		INC. 21			*			
001-1C	187454-9	外殼組	O	1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 21						
001-1D	187454-9	外殼組	O	1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 21						
001-1E	187454-9	外殼組		1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 21						
001-1F	187454-9	外殼組		1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 21						
002	815B76-4	DHP459 NAME PLATE		1				
003	266429-2	自攻螺絲 3X16		9				
004	419250-0	F / R 切換桿		1				
005	650689-0	起動變速開關		1				
006	619304-5	馬達轉子		1				
007	629960-3	外線圈		1				
008	620163-2	L E D 電路		1	*			
008-1	620624-2	LED CIRCUIT	<	1				
009	643860-3	電池接端座		1				
010	126180-5	切換桿組		1				
C10	233438-6	壓縮彈簧4		2				
011	232182-2	彈簧片		1				
012	251468-5	平頭螺絲 M6X22		1				
013	763175-3	快速夾頭 13		1				
014	126179-0	齒輪組		1				
015	266786-8	平頭螺絲 2*10		4				
016	620162-4	控制器		1				
017	687464-1	支承		1				
018	424517-3	緩衝墊		1				
021C	187454-9	外殼組		1	*			
C10	263005-3	橡皮銷 6		2	*			
D10		INC. 1			*			
021D	187454-9	外殼組		1	*			
C10	263005-3	橡皮銷 6		2	*			
D10		INC. 1			*			
021-1C	187454-9	外殼組	O	1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 1						
021-1D	187454-9	外殼組	O	1				
C10	263005-3	橡皮銷 6		2				

請訂購一個零件。

列印日期 2017/11/09

型號 DHP459 充電無刷起子震動電鑽18V

分解圖號	零件編號	品名	交換	數量	N/O	選擇1	選擇2	註記
D10		INC. 1						
021-1E	187454-9	外殼組		1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 1						
021-1F	187454-9	外殼組		1				
C10	263005-3	橡皮銷 6		2				
D10		INC. 1						
A01	251314-2	螺絲 M4X12		1				
A02	346317-0	掛勾(大)		1				
A03	784637-8	+ - 起子頭 2-45		1				
A04C	***DC18RC	充電器C/195582-6		1	*			
A04E	***DC18RC	充電器C/195582-6		1	*			
A04-1C	***DC18RC	充電器C/195582-6	<	1				
A04-1E	***DC18RC	充電器C/195582-6	<	1				
A04-1F	***DC18RC	充電器C/195582-6		1				
A05C	194204-5	電池 BL1830		2	*			
A05E	196789-7	鋰電池 BL1830		3	*			
A05F	196977-6	鋰電池BL1850*		2	*			
A05-1C	196789-7	鋰電池 BL1830	O	2	*			
A05-1E	196789-7	鋰電池 BL1830	O	3	*			
A05-1F	197287-4	鋰電池 顯示型 BL1850B	<	2				
A05-2C	196789-7	鋰電池 BL1830	O	2	*			
A05-2E	196974-2	鋰電池 BL1830	<	3	*			
A05-3C	196974-2	鋰電池 BL1830	<	2	*			
A05-3E	197604-8	鋰電池 顯示型 BL1830B	<	3				
A05-4C	197604-8	鋰電池 顯示型 BL1830B	<	2				
A06C	450128-8	電池保護蓋		1				
A06E	450128-8	電池保護蓋		2				
A06F	450128-8	電池保護蓋		1				
A07C	158597-4	塑料手提箱		1				
C10	324679-6	軸		1				
C20	417724-5	栓		2				
C30	419216-0	提把		1				
A07E	158597-4	塑料手提箱		1				
C10	324679-6	軸		1				
C20	417724-5	栓		2				
C30	419216-0	提把		1				
A07F	158597-4	塑料手提箱		1				
C10	324679-6	軸		1				
C20	417724-5	栓		2				
C30	419216-0	提把		1				
A08C	802M65-4	DHP459RFE PLASTIC CASE LABEL		2				
A08E	803A60-5	DHP459RFE3 PLASTIC CASE LABEL		2				
A08F	807Y06-7	DHP459RTE PLASTIC CASE LABEL		2				