


Model No.JV183D CORDLESS JIG SAW

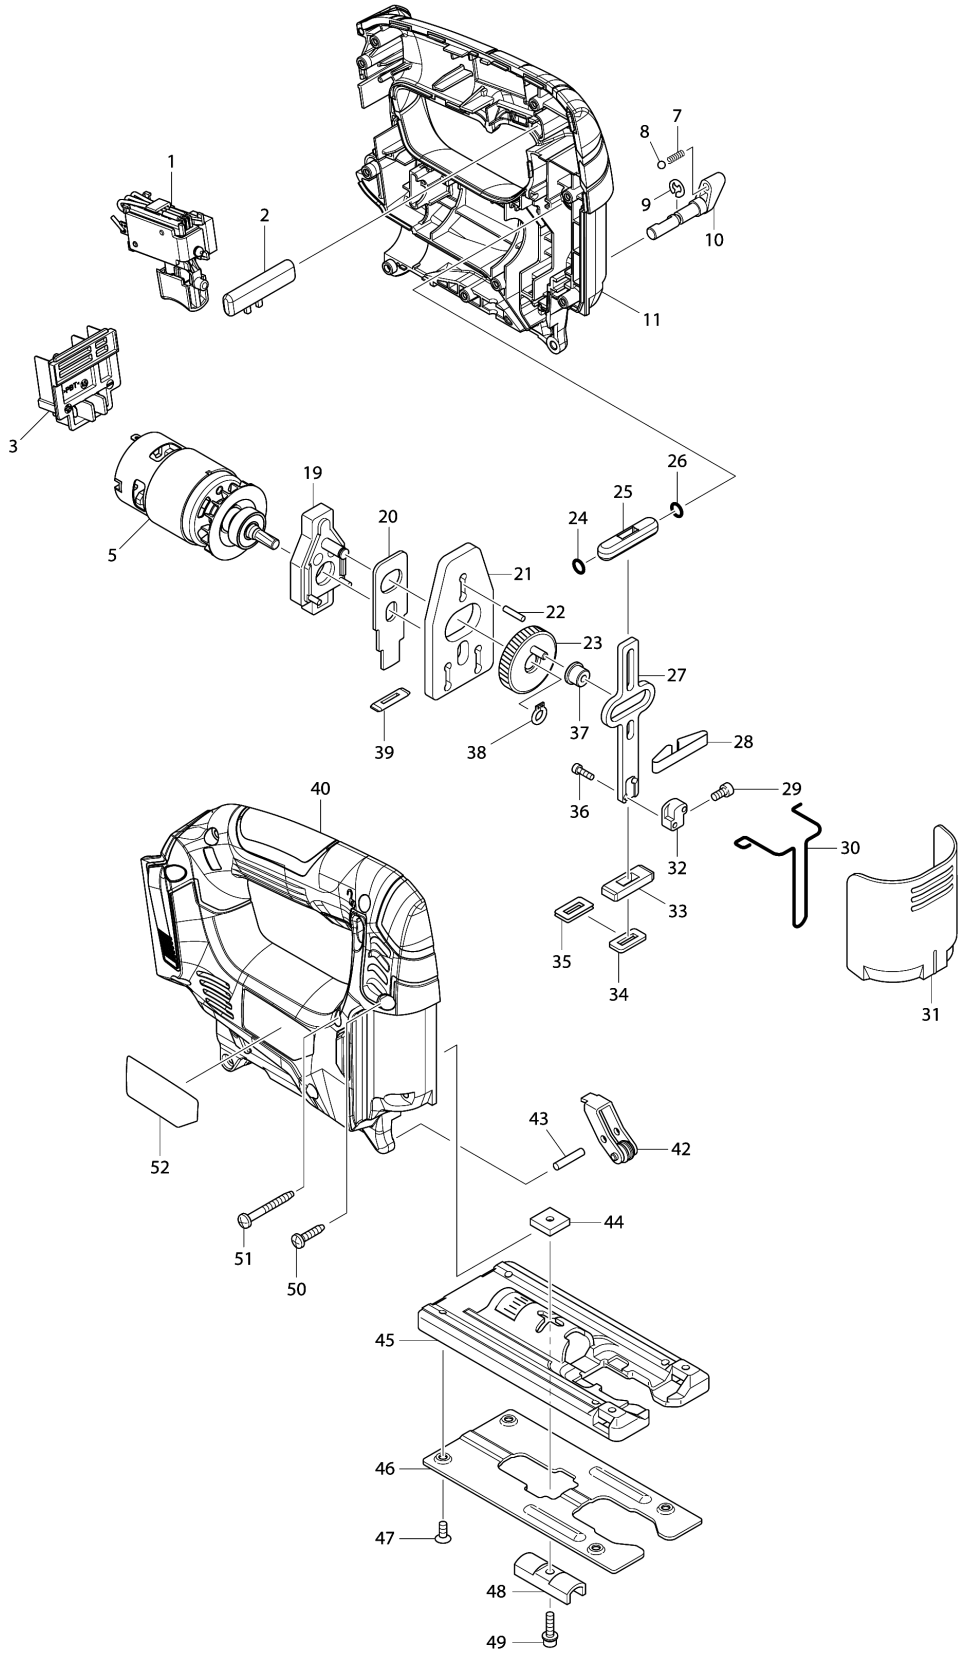

Model No.JV183D CORDLESS JIG SAW

分解圖號	零件編號	品名	交換	數量	New/Old	選擇1	選擇2	註記
001	632B67-8	SWITCH UNIT		1				
002	454742-2	LOCK OFF BUTTON		1				
003	643862-9	TERMINAL		1				
005	629113-4	DC MOTOR		1				
007	233151-6	扭力彈簧4 F/4304T,4324		1				
008	216008-6	鋼珠 4		1				
009	961011-9	擋圈 E-4		1				
010	272267-2	切替桿 19		1				
011	187723-8	HOUSING SET		1				
D10		INC. 40						
019	152600-3	軸承箱 F/4324,M435		1				
020	344683-9	壓板 F/4324,M435		1				
021	344614-8	平衡板 F/4323,M435		1				
022	256254-9	銷3 F/4323,M435		1				
023	153260-4	齒輪組 F/4324,M435		1				
024	213038-8	O圈5 F/4323,M435		1				
025	313082-6	滑體導片 F/4323,M435		1				
026	213038-8	O圈5 F/4323,M435		1				
027	344613-0	滑體 F/4323,M435		1				
028	232183-0	彈簧鉤 F/4324,M435		1				
029	922107-1	六角螺絲M4X8		1				
030	323748-0	安全隔離線 F/4323,M435		1				
031	416476-5	防塵蓋 F/4323,M435		1				
032	313140-8	刀具夾 F/4327		1				
033	313086-8	滑體支承 F/M435,4324		1				
034	423307-1	海棉封片 F/4323,M435		1				
035	344686-3	封片 F/4324,M435		1				
036	266177-3	螺絲M3X10 F/4323		2				
037	257683-9	筒環 F/4323,M435		1				
038	961002-0	檔圈 S-6		1				
039	416703-0	防塵片 F/4324,M435		1				
040	187723-8	HOUSING SET		1				
D10		INC. 11						
042	158392-2	擋具組 F/4328		1				
043	256117-9	銷4		1				
044	343540-8	螺絲座 F/4323,M435		1				
045	317796-9	底盤		1				
046	345441-6	底盤板		1				
047	912107-9	螺絲M4X8		4				
048-1	344685-5	鎖板 F/4324,M435		1				
049	922128-3	螺栓 M4X16		1				

Model No.JV183D CORDLESS JIG SAW

分解圖號	零件編號	品名	交換	數量	New/Old	選擇1	選擇2	註記
050	266326-2	螺絲 M4X18		9				
051	266351-3	螺絲 4X35		1				
052	815D85-5	JV183D NAME PLATE		1				
A01	A-85628	線鋸條B- 10(9T/75mm/5PC)-層板快速 修整		1				
A02	783201-2	六角扳手 3		1				
A03	***DC18WA	電池充電器 DC18WA		1				
A04-2B	198189-7	鋰電池 BL1815G		2				
A05	452652-7	電池蓋		1				
A06-1	821646-7	PLASTIC CARRYING CASE		1				
C10	162315-4	栓		2				
C20	452137-3	握把		1				
A07A	8031L6-5	JV183DWAE PLASTIC CASE LABEL		2				
A07B	802T11-9	JV183DWE PLASTIC CASE LABEL		2				

Please order the parts with part number.

Print Date 2021/12/3